

# Honeywell T4 or T6 Overview

## Button Functions:

- **+ and -:** change set point for heating and cooling
- **Fan:** change between fan settings
- **Mode:** Switch between heat/cool and off.
- **Menu:** to access higher functions such as programming, Wi-Fi settings (if applicable) etc.



## Fan Settings:

- **Auto-**will run the fan if unit is currently heating or cooling, if there is no call for heating or cooling the fan will turn off
- **On-**will run the fan 24/7 on a lower setting, regardless if there is a call for heating or cooling

## Modes:

- **Heat:** Uses primary heat source. If you have more than one heat source, see “EM Heat” description.
- **Cool:** Uses primary air conditioning source
- **Off:** No heating or cooling. If you have set the fan mode to “on”, the fan will continue to run.
- **EM Heat:** If you have more than one source of heat, your secondary source can be activated by putting your system in this mode.
  - **EX:** A dual fuel system with a gas furnace and heat pump will operate the heat pump under “Heat” mode and the gas furnace under “EM Heat” mode.